

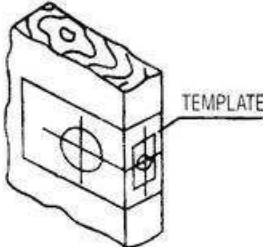
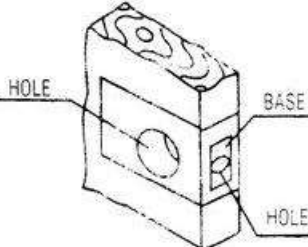
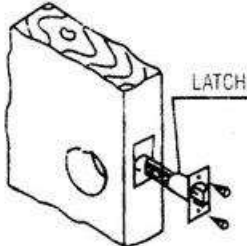
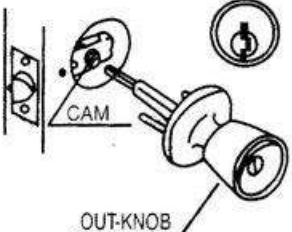
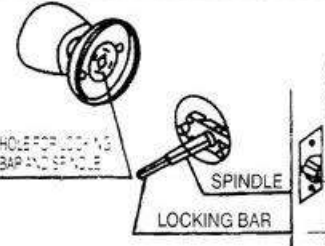
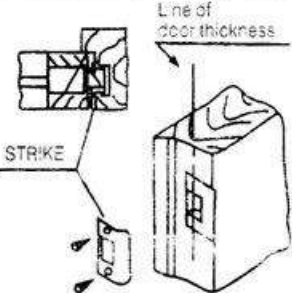



CONSTRUCTOR

WWW.CONSTRUCTORLOCKS.COM

T: (718) 499-6200; E: dsdgroup41@gmail.com

HOW TO INSTALL THIS TUBULAR LOCK

<p>1 MARK DOOR</p>  <p>Mark site of lock and Bore.</p>	<p>2 BORE HOLES</p>  <p>• Bore the holes through door • Cut out base.</p>	<p>3 INSTALL LATCH</p> 	<p>4 INSTALL OUT-KNOB</p>  <p>Key hole should be in down position</p>
<p>5 INSTALL IN-KNOB</p> 	<p>6 INSTALL STRIKE</p> 	<p>INSTRUCTION FOR ADJUSTABLE LATCH</p>  <p>The cam is pushed fully to the right for 70mm (2 3/4") backset. (During the adjustment keeping two teeth of the cam to forward always.)</p> <p>Push the latch inward, take off the adjust part for 70mm (2 3/4") backset.</p>	